

# DAY-TO-DAY VHF MAINTENANCE



**Step 1 - Daily: Wash off salt water with fresh water**



**Step 2 - Daily: Radios must be dry before placing in charger.**



**Step 3 - Weekly: Apply silicone grease to battery terminals**

N.B. Terminals may vary on different models.



**Step 4 - Weekly**

**Unscrew antenna and apply silicone grease to antenna socket**

**BC-173 Charger LED:**  
**Green = Fully-charged.**  
**Orange = Charging.**  
**Flashing Orange = Problem, with battery or charger.**



- Please replace antenna on first sign of rubber perishing.
- Check contacts in charger base for corrosion and water ingress - replace if in doubt.
- Check contacts on battery - replace if in doubt.